# <u>emedco</u>

# **Inspection Timer Instruction Sheet**



Α	-	landar	button

Dark green LED light

Inspection interval (7, 30, 90, 180, 365 days)

Yellow (amber) LED light

**Battery button** Replace battery indicator

Red LED light Light green LED light

Lockout device hole




#### Before Use

When first removing out of the box, press and hold all LEDs flash. Now start / reset the timer.



#### Activate / Reset Timer

- 1. Press and hold 📸 and 🖸, lights turn on in sequence, release when red light flashes. Countdown begins at dark green light.
- 2. New countdown has started.

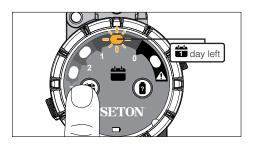

### Inspection Status


During the inspection period, the LED lights periodically flash to indicate the time remaining before an inspection

- Dark green LED beginning of inspection period, LED flashes every 2 minutes
- Light green LED early in inspection period, LED flashes every 2 minutes
- Yellow (amber) LED nearing end of inspection period, LED flashes every 10 seconds
- Red LED inspection period has passed, LED flashes every 2 seconds

To manually check the time remaining before your next inspection:

- Press and hold for 2 seconds.
- 2. LED for remaining time flashes for 5 seconds.

When the Red LED flashes, carry out your inspection and reset the timer (see Activation / Reset Timer). The red LED flashes for 7 days. After 7 days, the device enters sleep mode to conserve battery life.

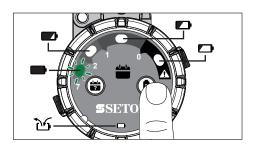

When the battery power is critically low, 
flashes red.


To manually check the battery status:

- 1. Press and hold a for 2 seconds.
- 2. LED light turns on to indicate the remaining battery life.
  - a. Dark green battery full
- c. Yellow (amber) replace batteries soon
- b. Light green battery good d. Red replace batteries now

## Replace Batteries

The device is powered by (3) AAA Batteries. To replace the batteries:

- 1. Turn front face counter-clockwise to remove it from back plate.
- 2. Remove old batteries.
- 3. To maintain the countdown time, install new batteries within 45 seconds of removing the old batteries.
- 4. Place the front face on the back plate and turn clockwise to complete battery replacement.
- 5. Press to re-enable power to the device. Check calendar to ensure power has been restored.
- 6. If no light flashes, press and hold "until all LEDs flash.
- 7. Timer resumes the current time countdown.

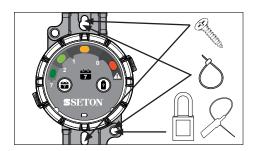

# **Attaching Timer to Item**

Attach Timer by using:

• Cable tie (up to .30" width)

- #6 screw (3.5 mm)
- Adhesive backing
- Hook and loop
- Magnet
- Padlock
  - · Security seal

Lockout devices:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired

